

Operating Container Reefer Units

Star Cool



Defrosting

To defrost manual press the defrost button located on the left, it has a picture of a snowflake raining on it. * Note; The computer will know if defrost is necessary or not. If defrost does not begin it is not needed.

Programming Temperature

If nothing is displayed on the screen make sure genset is running, main circuit breaker is in the on position, there is good plug connection and switch on unit is in the on position. Press the button that has the hand pointing on it. When "Setpoint" appears in the shaded column press the button below the arrow keys with the arrow pointing left. The current set point will become unshaded. Using the up and down arrows select the desired set point, then press and **HOLD** the Enter button below the arrow keys, (Enter is the arrow pointing left) until the new set point becomes shaded. Press the X button above arrow keys to return to the main screen to verify the new set point.

Alarm Codes

If the unit is malfunctioning or displaying any fault codes contact dispatch immediately. Write up a defect report for any alarm or fault codes when you return to the yard.